



MODEL
CR18DB

HIKOKI

CORDLESS RECIPROCATING SAW CR18DB

Item No.	Code No.	Description	No. Used	Remarks
1	379178	HEX. LOBE SCREW	6	
2	379176	GEAR CASE COVER	1	
3	379177	SPRING	2	
4	379175	PLUNGER ASS'Y	1	INCLUD.5-24
5	379202	BEVEL SUPPORT	1	
6	379195	CLAMP WIRE	2	
7	379180	CLIP	1	
8	379181	ROTATE BUSH	1	
9	379183	BUSH	1	
10	379184	DETENT PIN	1	
11	379185	TORSION SPRING	1	
12	379186	SLEEVE	1	
13	379187	CIRCLIPS FOR SHAFT	1	
14	379188	WASHER	2	
15	379189	FELT BLOCK	2	
16	379190	ALIGNING BEARING	2	
17	379196	PLUNGER	1	
18	379182	LOCATED PIN	1	
19	379191	BEARING CLAMP	1	
20	379198	THREAD FORMING SCREW (B)	4	
21	379192	CLEVIS PIN WITH HEAD	1	
22	379193	PLAIN WASHER	1	
23	379194	BALL BEARING	1	
24	379197	BEARING SUPPORT	1	
25	379170	HEX. SOCKET SCREW (B)	2	
26	379165	PIVOT SHOE	1	
27	379167	THREAD FORMING SCREW (A)	2	
28	379166	LED	1	
29	379164	WASHER (A)	1	
30	379163	CLAMP	1	
31	379162	HEX. SOCKET SCREW (A)	2	
32	379174	PIN (A)	1	
33	379209	PENDULUM LEVER	1	
34	379154	FRONT HANDLE	1	
35	379155	SUPPORT	1	
36		NAME PLATE	1	
37	379173	CRANK ROLLER	1	
38	379172	NEEDLE BEARING (A)	1	
39	379171	WASHER (B)	1	
40	379201	ECCENTRICK BLOCK	1	
41	379169	COUNTER WEIGHT	1	
42	379168	SCREW WITH WASHER	2	
43	379210	TRANSMISSION	1	
44	379156	TAPPING SCREW (A)	4	
45	379200	GEAR CASE	1	
46	361191	ROTOR SET	1	
47	379179	MAGNET	1	
48	379161	ELECTRIC ASS'Y	1	
49		BRAND LABEL	1	
50	379157	TAPPING SCREW (B)	11	
51	379159	LOCK BUTTON	1	
52	379160	RUBBER STICK (B)	1	
53	379158	RUBBER STICK (A)	1	

* ALTERNATIVE PARTS

HIKOKI**CORDLESS RECIPROCATING SAW CR18DB**

Item No.	Code No.	Description	No. Used	Remarks
54	379199	HOUSING SET	1	
*55	335790	BATTERY BSL 1850 (EUROPE,AUS,NZL)	2	INCLUD.503
		STANDARD ACCESSORIES		
501	378895	CASE	1	
502		CHARGER (MODEL UC 18YFSL)	1	
503	329897	BATTERY COVER	2	
504	944458	HEX. BAR WRENCH 4MM	1	
		OPTIONAL ACCESSORIES		
*601	959611	SABER SAW BLADES NO.4 (5 PCS.)	1	FOR HIKOKI
*602	958185	SABER SAW BLADES NO.5 (5 PCS.)	1	FOR HIKOKI
*603	318611	SABER SAW BLADES NO.101 150L P.10 (5 PCS)	1	FOR HIKOKI
*604	318612	SABER SAW BLADES NO.102 228L P.10 (5 PCS)	1	FOR HIKOKI
*605	318613	SABER SAW BLADES NO.103 150L P.14 (5 PCS)	1	FOR HIKOKI
*606	318614	SABER SAW BLADES NO.104 228L P.14 (5 PCS)	1	FOR HIKOKI
*607	318617	SABER SAW BLADES NO.107 150L P.24 (5 PCS)	1	FOR HIKOKI
*608	318618	SABER SAW BLADES NO.108 228L P.24 (5 PCS)	1	FOR HIKOKI
*609	324818	SABER SAW BLADES NO.109 150L P.18 (5 PCS)	1	FOR HIKOKI
*610	324819	SABER SAW BLADES NO.110 228L P.18 (5 PCS)	1	FOR HIKOKI
*611	318619	SABER SAW BLADES NO.121 305L P.6 (5 PCS.)	1	FOR HIKOKI
*612	318620	SABER SAW BLADES NO.131 305L P.10/14(5PC	1	FOR HIKOKI
*613	318621	SABER SAW BLADES NO.132 203L (5 PCS.)	1	FOR HIKOKI
*614	370683	CURVED BLADES NO.141(S)150L P.14(3 PCS.)	1	FOR HIKOKI
*615	370684	CURVED BLADES NO.142(S)200L P.14(3 PCS.)	1	FOR HIKOKI
*616	370685	CURVED BLADES NO.143(S)250L P.14(3 PCS.)	1	FOR HIKOKI

* ALTERNATIVE PARTS