



HIKOKI

CORDLESS DRIVER DRILL DS18DD

Item No.	Code No.	Description	No. Used	Remarks
1	337426	LEFT-HAND HEXALOBULAR M5	1	
2	376359	DRILL CHUCK 13TLRA-N	1	
3	374383	GEAR BOX (A)	1	
4	313687	TAPPING SCREW (W/FLANGE) D3X16 (BLACK)	8	
5		NAME PLATE	1	
6	376360	WIRING ASS'Y	1	
7	374399	PUSHING BUTTON	1	
8	376362	DC-SPEED CONTROL SWITCH	1	
9	374382	SHIFT KNOB	1	
10	376361	BATTERY TERMINAL	1	
11	376357	HOUSING (A).(B) SET	1	
*12	333352	BATTERY BSL 1815 (EUROPE)	2	INCLUD.502
*12	339783	BATTERY BSL 1830C (EUROPE,AUS,NZL)	2	INCLUD.502
*12	376029	BATTERY BSL 1850C (EUROPE,AUS,NZL)	2	INCLUD.502
		STANDARD ACCESSORIES		
*501		CHARGER (MODEL UC18YKSL)	1	
				FOR CHN,SIN,MAL,AUS,NZL,TPE
*501		CHARGER (MODEL UC18YFSL)	1	
				FOR EUROPE
502	329897	BATTERY COVER	1	
503	983006	+ DRIVER BIT NO.2 65L	1	
504	336642	CASE	1	
505	376358	HOOK SET	1	
506	336471	CASE ASS'Y (STACKABLE 2)	1	INCLUD.507-509
507	336472	LATCH	4	
508	336473	HANDLE	1	
509	336474	HINGE	2	
510	376502	INNER TRAY	1	

* ALTERNATIVE PARTS